

SERVICE AND MAINTENANCE NOTES

MODELS 60, 61, 65

COMPRISING:

60-R TUNER 60-A AMPLIFIER 60-AP POWER SUPPLY

FISHER RADIO CORPORATION NEW YORK, N. Y.

www.fisheroonsoles.com

GENERAL INFORMATION

THE FISHER Custom Sixty has been designed for those desiring an FM-AM receiver of professional quality. It comprises a two-band superheterodyne circuit and employs completely independent RF and IF channels for AM and FM. There are three stages of IF and a ratio detector on FM, one stage of IF on AM and a tuned RF stage ahead of the first detector on both AM and FM. Automatic Frequency Control (AFC) is incorporated on FM to assure accurate tuning and complete freedom from drift. The Fisher Custom Sixty is supplied with built-in FM and AM antennas. Terminats are also provided for connection of external antennas, where the latter are desirable. The external FM antenna input is designed to operate either with 300-ohm balanced lead-in or 72-ohm coaxial shielded lead-in.

The sixty-watt audio amplifier employs push-pull parallel power output to assure extremely low distortion even at high power. The carefully designed flywheel tuning mechanism is unexcelled in simplicity and ease of station selection. The slide rule dial glass has large, easy-to-read numerals, edge lighted. There are individual channel indicator lights. Receptacles are available for instant connection of the FISHER Dynamic Range Expander. An auxiliary input receptable is furnished for connection to the sound channel of a television receiver, microphone pre-amplifier, etc. The receiver is connected to this jack when the Channel Selector Switch is turned to the "TV" position. An AC receptacle mounted on the rear apron of the chassis supplies current for the operation of a Television Receiver when the Channel Selector Switch is turned to the "TV" position.

OPERATING INSTRUCTIONS ANTENNAS

The built-in FM antenna is of the folded dipole type and is satisfactory in most urban locations. Where reception is desired either from weak or remote FM stations, we recommend the use of the specially matched, FISHER FM Antenna System.

The AM antenna consists of a loop mounted inside the speaker compartment. It is the only antenna required for reception of local broadcast stations, except where the receiver is used in unusually noisy locations or at a distance from broadcasting centers. In the event that an outside antenna is required, we recommend the use of THE FISHER Noise-Reducing Antenna System. This system offers optimum efficiency in bringing, from the roof to the receiver, the signal available in the location in which the receiver is to be used. CAUTION: NEVER disconnect the AM loop antenna plug, whether or not the receiver is used with an external antenna.

ON-OFF SWITCH

The On-Off Switch and the Bass Tone Control are regulated by the same knob. When turning the set on continue the rotation of the knob to that point which gives the desired degree of bass intensity. For further details see "Bass Tone Control."

TONE CONTROLS

TREBLE TONE CONTROL. This control can be used to regulate brilliance. For a more intimate tone, turn to left; for brighter tone, turn to right. Set it at the point you find most pleasing, for the particular program being played.

BASS TONE CONTROL. Should be set to minimum (extreme left) on male speaking voice. For music, according to personal taste. When playing music at low volumes, the usual loss in bass intensity (due to one's inherently reduced hearing efficiency at low volumes) can be compensated for by turning the control clockwise to the desired degree.

THE FISHER DYNAMIC RANGE EXPANDER (Optional Equipment)

THE FISHER Dynamic Range Expander is designed to restore to records the full accents and crescendos of the original performance, usually monitored out of the recording at the time it was made, because of the limited dimensions of the groove. Turn the control to the right, to the desired degree. It will then operate automatically. The main volume control should be set at that point where, with the amount of expansion produced, the maximum volume will be within the desired limit. NOTE: If the Expander is purchased after the delivery of the original set, it can be instantly connected. Simply remove the jumper that will be found on the two receptacles marked "Expander" on the rear apron of the chassis. Connect the input of the Expander to the receptacle on the chassis marked "Expander Input"; connect the output of the Expander to the receptacle on the chassis marked "Expander Output."

CHANNEL SELECTOR SWITCH

Turn Channel Selector knob to the desired channel whether Broadcast, FM, Phonograph, or Television Sound input. Lights on the dial scale indicate the channel to which the knob is set.

AUTOMATIC FREQUENCY CONTROL ON FM

THE FISHER FM Receiver is equipped with an Automatic Frequency Control, designed to simplify tuning. You will find that when the dial pointer is brought within the vicinity of the desired channel, the station will automatically lock in and remain correctly tuned. It cannot drift out. The control regulating the range of lock in is located on the rear apron of the chassis and is pre-set at our laboratories. In some locations, however, where a weak station is separated from a strong station by only two channels, the latter will tend to operate the control circuit and make it difficult to bring in the weak station. Should this occur, turn the Automatic Frequency Control (knurled brass shaft on the rear apron of the chassis) counter clockwise to the degree necessary to eliminate the above condition.

ALIGNMENT PROCEDURE AM IF ALIGNMENT

NOTE: For the following IF and RF adjustments the signal generator should be readjusted as necessary to maintain the output below 2 volts across the voice coil.

- 1. With the Selector Switch in the Broadcast position, set the tuning capacitor for maximum capacity.
- 2. Feed a 455 Kc amplitude modulated signal to the signal grid of the 6BE6 converter tube (pin 7 of V-9) through a 0.1 mfd capacitor.
- 3. Set the Volume Control at maximum.
- 4. Connect an output meter across the speaker voice coil.
- 5. Adjust the top and bottom cores of the 1st and 2nd IF transformers (Z·5 and Z·6) for maximum. If noise causes excessive meter deflection, the Volume Control should be turned down slightly.

BROADCAST ALIGNMENT

- 1. With the tuning capacitor completely closed, set the pointer to the index mark on the dial. (The first graduation mark appearing at the extreme left of the dial scale markings.)
- 2. Connect an amplitude modulated signal generator to the AM antenna terminals. A 200 mmfd capacitor should be inserted between the "high" side of the generator lead and the antenna terminal.

- 3. Set the dial and signal generator to 1400 Kc.
- 4. Adjust the Broadcast oscillator, RF and antenna coil trimmers (C-43, C-41 and C-36 respectively) for maximum.
- 5. Set the dial and signal generator to 600 Kc.
- 6. Adjust the Oscillator, RF and antenna coil cores (L-9, L-8 and L-7 respectively) for maximum.
- 7. Reset the dial and signal generator to 1400 Kc and repeat step 4 if necessary.

FM DETECTOR ALIGNMENT

NOTE: For all of the following IF and RF adjustments the output of the signal generator should be readjusted as necessary to maintain the voltage at test point A (shown on schematic) between 8 and 9 volts dc.

- 1. Rotate the Selector Switch to the FM position.
- 2. Connect an electronic voltmeter between the chassis and the positive side of the 4 mfd electrolytic capacitor, C34. (Test point A on the schematic diagram.)
- 3. Feed an unmodulated 10.7 Mc signal through a .1 mfd capacitor to the 6BA6 FM detector-drive grid (pin 1 on V-6.)
- 4. Tune the FM detector primary (bottom of Z-4) for maximum.
- 5. Disconnect the electronic voltmeter from the 4 mfd capacitor and connect to the FM detector audio output (test point B on schematic diagram.)
- 6. Tune the FM detector secondary (top of Z-4) for zero.

FM IF ALIGNMENT

- Feed an unmodulated 10.7 Mc signal through a 500 to 1000 mmfd capacitor to the grid of the RF amplifier tube (pin 1 of V-1.)
- 2. Connect the electronic voltmeter to test point A as in step 2 above.
- 3. Align the top and bottom cores of the 1st, 2nd and 3rd IF coils (Z-1, Z-2 and Z-3 respectively) for maximum.

FM RF ALIGNMENT

NOTE: For the following adjustments the AFC circuit should be disabled by turning the AFC control (R-13) fully counterclockwise.

1. Set the dial to 106 Mc.

- 2. Feed a 106 Mc unmodulated signal to the 300-ohm FM antenna terminals with a 120 ohm composition resistor connected in series with each lead of the signal generator.
- 3. Connect the electronic voltmeter to test point A.
- Adjust the oscillator, RF and antenna trimmers (C-12, C-7 and C-3 respectively) for maximum. For optimum adjustment rock the tuning capacitor back and forth while adjusting the RF trimmer.

NOTE

THE FOLLOWING ADJUSTMENTS HAVE BEEN MADE AT THE FACTORY AND SELDOM REQUIRE REALIGNMENT EXCEPT WHEN COILS AND COMPONENTS IN THE FM RADIO-FREQUENCY SECTION HAVE BEEN REPLACED.

- Set the signal generator to 90 Mc and tune the receiver for maximum as indicated on the electronic voltmeter.
- 6. If the dial calibration is off more than .2 Mc at 90 Mc, set the dial to 90 Mc and adjust the core in the FM oscillator coil (L-4) for maximum.
- 7. Adjust the core in the antenna coil (L-1) and spread or compress the RF coil (L-3) for maximum.
- 8. Reset the dial and signal generator to 106 Mc and repeat step 4.
- 9. Set the signal generator to 90 Mc and tune the receiver for maximum. If calibration has shifted as a result of step 8, repeat steps 6, 7 and 8.
- 10. If the receiver was badly out of alignment, step 9 may have to be repeated more than once.

AUDIO AMPLIFIER ADJUSTMENTS BIAS ADJUSTMENT

- 1. Turn volume control fully counter clockwise.
- 2. Insert DC milliammeter between center tap (pin 2) of output transformer and high voltage supply (red wire).
- 3. Adjust the bias control (R-19) so that the plate current is exactly .135 amperes.


HUM BALANCE ADJUSTMENT

- 1. Turn volume control fully counter clockwise.
- 2. Connect an audio vacuum tube voltmeter, such as Hewlett-Packard 400A, across the speaker jack.
- 3. Vary hum balance control (R-22) for minimum reading on output meter. Occasionally a distinct null point may not be found; in this event interchanging 6B4 tubes will cure this condition. In extreme cases it may be necessary to select 6B4 tubes.

PHASE-INVERTER BALANCE ADJUSTMENT

This adjustment is only required when components in the phase-inverter circuit are replaced and should never be attempted unless a low distortion audio generator and either a wave analyzer or distortion analyzer are available.

- 1. Disconnect audio amplifier input from tuner chassis and feed the audio generator directly into the amplifier input (J1).
- 2. Disconnect the speaker and connect a 16 ohm 20 watt resistor across the 16 ohm amplifier output (pins 2 and 3 on jack J2.)
- Connect wave analyzer or distortion analyzer across 16 ohm resistor.
- 4. Set the audio generator attenuator so that the amplifier produces 10 watts output (12.7 volts rms) across the 16 ohm resistor.
- Tune the wave analyzer to the second harmonic of 1000 cps or if a distortion analyzer is used, tune it for minimum reading at 1000 cps.
- Adjust the phase-inverter balance control for minimum distortion.

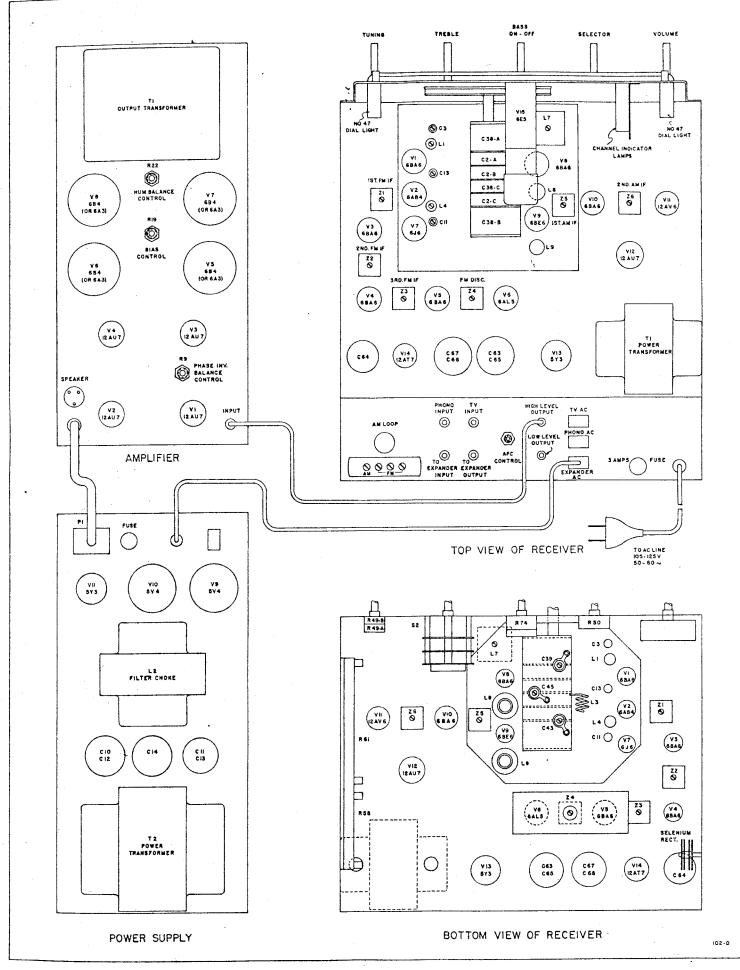

LOCATION OF MAJOR COMPONENTS

www.fisherconsoles.com

SPECIFICATIONS

BAND

FREQUENCY MODULATION STANDARD BROADCAST

TUNING RANGE

188MC TO 108MC

INTERMEDIATE FREQUENCY

10.7 MC 455 KC

RADIO : 105 TO 125 VOLTS AC 50/60 CYCLES 330 WATTS PHONOGRAPH: 105 TO 125 VOLTS AC 60 CYCLES ITWATTS 50 CYCLES AVAILABLE

TUBE COMPLEMENT

TUNER			AMPLIFIER			
SYMBOL	TYPE	FUNCTION	SYMBOL	TYPE	FUNCTION	
V 1 V 2 V 3 V 4 V 5 V 6 V 7 V 5 V 9	68A 6 68A 6 68A 6 68A 6 68A 6 6AL 5 6J 6 6BE 6	FM RF AMPLIFIER FM CONVERTER FM IST. IF AMPLIFIER FM 2ND. IF AMPLIFIER FM 3RD. IF AMPLIFIER FM DETECTOR FM OSCILLATOR AND AFC AM RF AMPLIFIER	VI V2 V3 V4 V5 V6 V7 V8	12 AU 7 12 AU 7 12 AU 7 12 AU 7 12 AU 7 6 B 4 (OR 6) 6 B 4 (OR 6)	AF AMPLIFIER, PHASE INVERTER PUSH-PULL AMPLIFIER CATHODE COUPLED DRIVER CATHODE COUPLED DRIVER A3) AUDIO POWER AMPLIFIER	
V10 V11 V12 V13 V14 V15	68A6 12AY6 12AU7 5Y3 12AT7 6E5	AM OSCILLATOR AND CONVERTER AM IF AMPLIFIER AM DETECTOR & IST AF AMPLIFIER CATHODE FOLLOWER OUTPUT FULL WAVE RECTIFIER PHONO PRE-AMPLIFIER TUNING INDICATOR	V 10 V 10	<u>P</u> . 5 Y 4 5 Y 4 5 Y 3	OWER SUPPLY FULL WAVE RECTIFIER FULL WAVE RECTIFIER FULL WAVE RECTIFIER	

102-E


SPECIFICATIONS AND TUBE COMPLEMENT

INSTRUCTIONS FOR REPLACEMENT OF DIAL CORD

- 1. REMOVE FOUR BAND INDICATOR LAMPS FROM BRACKET MOUNTED ON DIAL PLATE.
- 2. REMOVE DIAL LAMPS LOCATED AT EACH SIDE OF DIAL SCALE.
- 3. SLIDE TUNING EYE TUBE FREE OF CLIPS.
- # REMOVE THREE DIAL GLASS CLIPS (ONLY THOSE LABELED "A" IN ILLUSTRATION).
- REMOVE DIAL PLATE BY UNSCREWING SIX HEXAGONAL SELF-TAPPING SCREWS (LABELED B) HOLDING DIAL PLATE TO CHASSIS.
- 6. REMOVE OLD DIAL CORD AND RESTRING WITH NEW AS SHOWN IN ILLUSTRATION.
- T. MOUNT DIAL PLATE ON CHASSIS.
- 8. RESTORE THE TUNING EYE TUBE, BAND INDICATOR LIGHTS AND DIAL LIGHTS.
- 9. REPLACE DIAL GLASS CLIPS. THE TWO UPPER CLIPS SHOULD ENCIRCLE THE DIAL CORD AND THE THIRD CLIP SHOULD ENCIRCLE THE WIRES TO THE DIAL LIGHT.
- MOUNT DIAL POINTER AND WITH VARIABLE CAPACITOR FULLY CLOSED, CENTER POINTER OVER INDEX MARK ON DIAL.

NOTE:


USE ONLY DIAL CORD (PART NO. A1374) OBTAINABLE FROM FISHER RADIO CORPORATION.

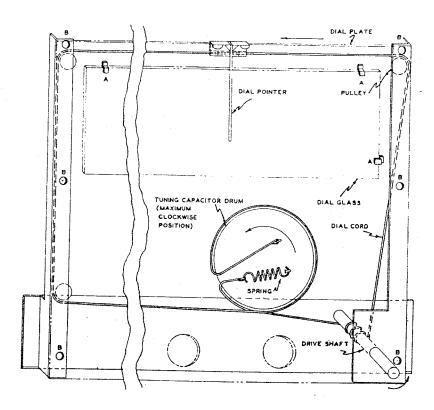


102-F


DIAL STRINGING INSTRUCTIONS


www.fisherconsoles.com

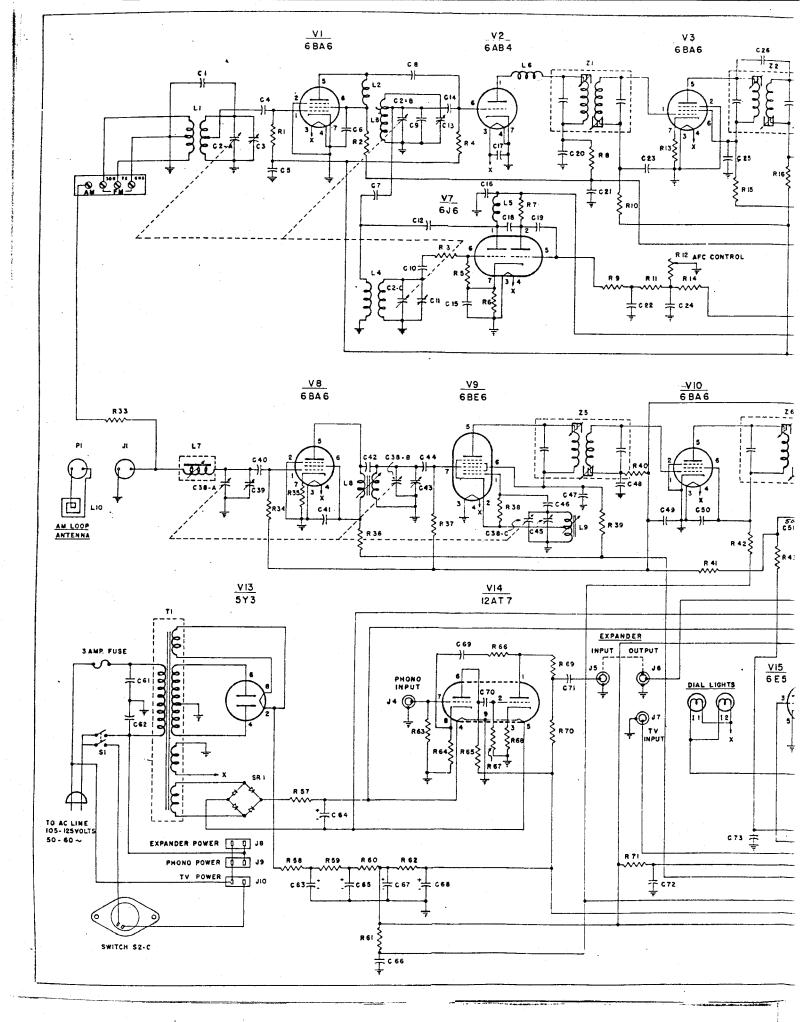

www.fisherconsoles.com

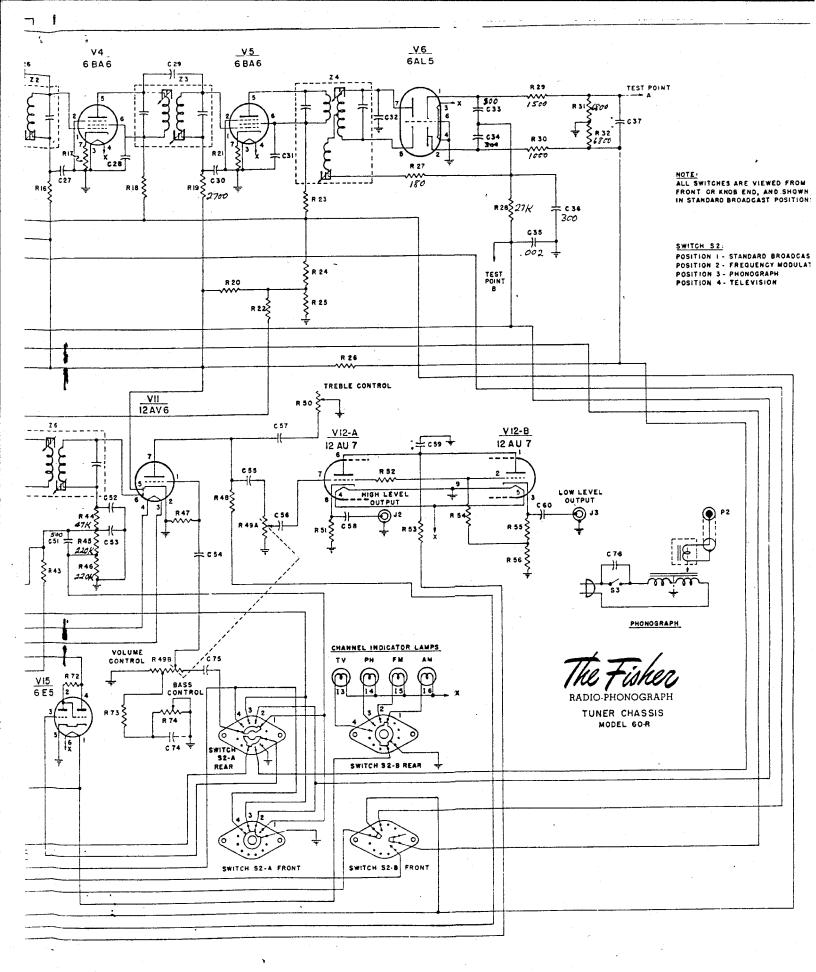

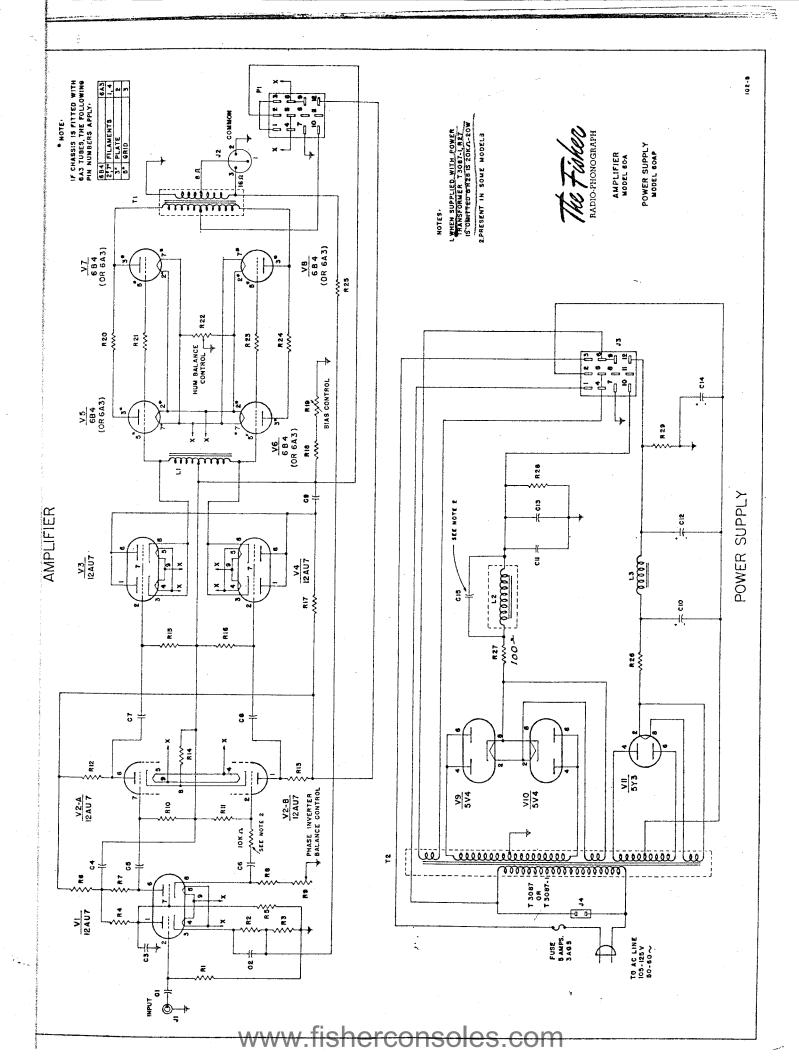


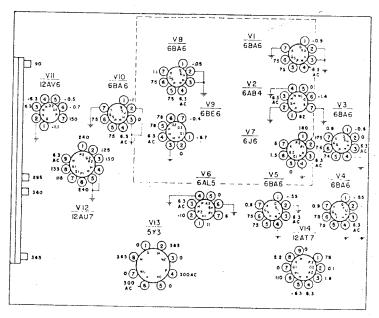

TUNER

- ALL VOLTAGES ARE TO BE MEASURED WITH AN ELECTRONIC

- ALL VOLTAGES AME TO BE MEASURED WITH AN ELECTRONIC VOLTMETER ALL VOLTAGE READINGS ARE D.G. TO CHASSIS UNLESS OTHERWISE SPECIFIED LINE VOLTAGE IT VOLTS GO CYCLES
 BANDSWITCH S: TO BE IN BROADCAST POSITION WITH DIAL SET AT 1000 KC. FOR ALL TUBES EXCEPT VI, V2, AND V7 WHICH ARE MEASURED WITH BANDSWITCH IN F.M. POSITION
- VOLUME CONTROL TO BE SET IN EXTREME COUNTER-CLOCKWISE POSITION

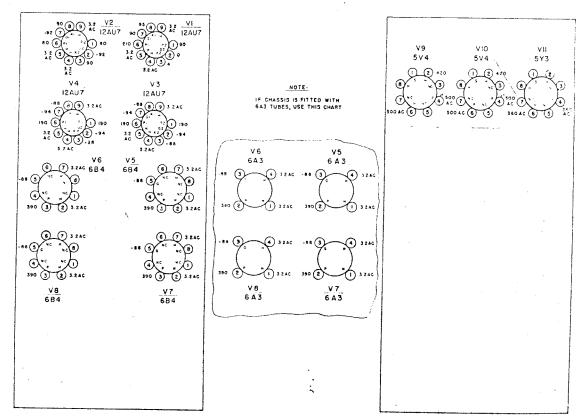

AMPLIFIER

POWER SUPPLY

PARTS DESCRIPTION LIST

TUNER CHASSIS, MODEL 60-R

				PECODINIDAL P	
Symbol		Part No.	Symbol		Part No.
CI	Capacitor, Ceramic: 10 mmfd: NPO	C-1317	C64	Capacitor, Electrolytic: 500 mfd; 15 V	C-3073
C2a, b, c	Capacitor, Variable: FM Section	C-2965	C65	Capacitor, Electrolytic: 40 mfd; 450 V Capacitor, Molded Tubular: .1 mfd; 400 V	C-1798 C-1102
C3	Capacitor, Trimmer: 1 - 8 mmfd	C-2970	C66 C67	Capacitor, Moided Tubular: .1 init, 400 V	C-1798
C4	Capacitor, Ceramic: 500 mmfd	C-1315 C-2146	C68	Capacitor, Electrolytic: 40 mfd; 450 V	C-1798
C5	Capacitor, Ceramic: .005 mfd Capacitor, Ceramic: .005 mfd	C-2146	C69	Capacitor, Mica: .003 mfd; 300 V	C-1219
C6 C7	Capacitor, Ceramic: 2.2 mmfd	C-3039	C70	Capacitor, Paper Tubular: .002 mfd; 600 V	C-1990
C8	Capacitor, Ceramic: 4.7 mmfd	C-1779	C71	Capacitor, Molded Tubular: .1 mfd; 400 V	C-1102
C9	Capacitor, Ceramic: 2.2 mmfd	C-3039	C72	Capacitor, Molded Tubular: .1 mfd; 400 V	C-1102
C10	Capacitor, Ceramie: 47 mmfd; NPO	C-2147	C73	Capacitor, Molded Tubular: .022 mfd; 400 V	C-2946
CH	Capacitor, Trimmer: 1 - 8 mmfd	C-2970	C74	Capacitor, Molded Tubular: .022 mfd; 400 V	C-2946
C12	Capacitor, Ceramic: 500 mmfd	C-1315	C75	Capacitor, Molded Tubular: .1 mfd; 400 V	
C13	Capacitor, Trimmer: 1 - 8 mmfd	C-2970	C76	Capacitor, Molded Tubular: .01 mfd; 400 V	C-1109
C14	Capacitor, Ceramic: 1500 mmfd	C-1314	R1	Resistor, Composition: 470,000 ohms; ½ W	R-1836
C15	Capacitor, Ceramic: .005 mfd	C-2146	R2	Resistor, Composition: 1000 ohms; 1/2 W	R-1577
C16	Capacitor, Ceramic: .005 mfd	C-2146	R3	Resistor, Composition: 10 ohms; 1/2 W	R-1807
C17	Capacitor, Ceramic: .005 mfd	C-2146	R4	Resistor, Composition: 1 megohm; 1/2 W	R-1732
C18 .	Capacitor, Ceramic: 24 mmfd; NPO	C-1781	R5	Resistor, Composition: 22,000 ohms; ½ W	R-1736
C19	Capacitor, Ceramic: 10 mmfd; NPO	C-1317	R6	Resistor, Composition: 330 ohms; ½ W	R-1790
C20	Capacitor, Ceramic: .005 mfd	C-2146 C-2146	R7	Resistor, Composition: 3300 ohms; 1 W	R-2415
C21	Capacitor, Ceramic: .005 mfd	C-1318	R8	Resistor, Composition: 2700 ohms; ½ W	R-1738
(*22	Capacitor, Mica: 100 mmfd; 500 V Capacitor, Ceramic: .005 mfd	C-2146	R9	Resistor, Composition: 220 ohms; ½ W	R-1733
C23	Capacitor, Molded Tubular: .047 mfd; 400 V		R10	Resistor, Composition: 2700 ohms; ½ W	R-1738
C25	Capacitor, Ceramic: .005 mfd	C-2146	R11	Resistor, Composition: 100,000 ohms; ½ W	R-1583
C26	Capacitor, Ceramic: I mmfd	C-1786	R12	Potentiometer, Composition: 2.5 megohms	R-2403
C27	Capacitor, Ceramic: .005 mfd	C-2146	R13	Resistor, Composition: 100 ohms; ½ W	R-2408
C28	Capacitor, Ceramic: .005 mfd	C-2146	R14	Resistor, Composition: 470,000 ohms; ½ W Resistor, Composition: 1000 ohms; ½ W	R-1577
C29	Capacitor, Ceramic: 1 mmfd	C-1786	R15	Resistor, Composition: 2700 chms; ½ W	R-1738
C30	Capacitor, Ceramic: .005 mfd	C-2146	R16 R17	Resistor, Composition: 100 ohms; ½ W	R-2408
- C31	Capacitor, Ceramic; .005 mfd	C-2146	R18	Resistor, Composition: 1000 ohms; ½ W	R-1577
C32	Capacitor, Ceramic: 1 mmfd	C-1786	R19	Resistor, Composition: 2700 ohms; 1/2 W	R-1738
C33	Capacitor, Mica: 300 mmfd; 500 V	C-1789	R20	Resistor, Composition: 6.8 megohms; 1/2 W	R-2431
C31	Capacitor, Mica: 300 mmfd; 500 V	C-1789	R21	Resistor, Composition: 100 ohms; 1/2 W	R-2408
C35	Capacitor, Mica: .002 mfd; 500 V	C-1265	R22	Resistor, Composition: 18 megohms; ½ W	R-3009
C36	Capacitor, Mica: 300 mmfd; 500 V	C-1789	R23	Resistor, Composition: 1000 ohms; ½ W	R-1577
C37	Capacitor, Electrolytic: 4 mfd; 250 V	C-1886	R24	Resistor, Composition: 4700 ohms; I W	R-2418
C3Sa, b, c	Capacitor, Variable: AM Section	C-2965	R25	Resistor, Composition: 4700 ohms; 1 W	R-2418
C39		C-2965 C-1789	R26	Resistor, Composition: 2.2 megohms: ½ W	R-1734
C40	Capacitor, Mica: 300 mmfd; 500 V		R27	Resistor, Composition: 180 ohms; ½ W	R-1782
C41	Capacitor, Molded Tubular: .01 mfd; 400 V	C-1786	R28	Resistor, Composition: 27,000 ohms: ½ W	R-2171 R-1741
C42	Capacitor, Ceramic: 1 mmfd	C-2965	R29	Resistor, Composition: 1500 ohms: ½ W Resistor, Composition: 1000 ohms: ½ W	R-1577
C43	Capacitor, Trimmer Part of Capacitor, Mica: 300 mmfd; 500 V	C-1789	R30	Resistor, Composition: 6800 ohms; ½ W	R-1973
C44	•	C-2965	R31	Resistor, Composition: 6800 ohms; ½ W	R-1973
C15	Capacitor, Trimmer Part o Capacitor, Mica: 300 mmfd; 500 V	C-1789	R32 R33	Resistor, Composition: 1000 ohms; ½ W	R-1577
C46	Capacitor, Molded Tubular: .022 mfd; 400 V			Resistor, Composition: 1 megohm; ½ W	R-1732
C47	Capacitor, Molded Tubular: .022 mfd; 400 V		R34 R35	Resistor, Composition: 120 ohms; ½ W	R-1330
C48	Capacitor, Molded Tubular: .047 mfd; 400 V		R36	Resistor, Composition: 1000 ohms; ½ W	R-1577
C49	Capacitor, Ceramic: .005 mfd	C-2146	R37	Resistor, Composition: 470,000 ohms; ½ W	
C50	Capacitor, Ceramic: 500 mmfd	C-1315	R38	Resistor, Composition: 22,000 ohms; ½ W	R-1736
C51	Capacitor, Mica: 100 mmfd; 500 V	C-1318	R39	Resistor, Composition: 1000 ohms: ½ W	R-1577
C52	Capacitor, Mica: 100 mmfd; 500 V	C-1318	R40	Resistor, Composition: 1 megohm; ½ W	R-1732
C53	Capacitor, Molded Tubular: .022 mfd; 400 V		R41	Resistor, Composition: 2.2 megohms; 1/2 W	R-1734
C54	Capacitor, Molded Tubular: .047 mfd; 400		R42	Resistor, Composition: 1000 ohms; 1/2 W	R-1577
C55-	Capacitor, Moided Tubular: .022 mfd; 400 V		R43	Resistor, Composition: 2.2 megohms; 1/2 W	R-1734
C56	Capacitor, Molded Tubular: .01 mfd; 400 V		R44	Resistor, Composition: 47,000 ohms; 1/2 W	R-1580
C57	Capacitor, Molded Tubular: .1 mfd; 400 V		R45	Resistor, Composition: 220,000 ohms; 1/2 W	R-1624
C58	Capacitor, Blothed Tubblat, 17 mrd, 400 V	C-3132	R46	Resistor, Composition: 220,000 ohms; 12 W	R-1624
C59	Capacitor, Molded Tubular: .1 mfd; 400 V	C-1102	R47	Resistor, Composition: 18 megohms; 1/2 W	R-3009
C60	Capacitor, Molded Tubular: .01 mfd; 400 V		R48	Resistor, Composition: 47,000 ohms; 1/2 W	R-1580
C61	Capacitor, Molded Tubular: .01 mfd; 400 V		R49a	Potentiometer, Composition: 500,000 ohms	
C62 C63	Capacitor, Electrolytic: 40 mfd; 450 V	C-1798	R49b	Potentiometer, Composition: 500,000 ohms	M-162
.,00	were the transfer of the control of				

PARTS DESCRIPTION LIST

				A	
Symbol	DESCRIPTION	Part No.		AMPLIFIER, MODEL 60-A	
R50	Potentiometer, Composition: 1 megohm	R-2815-2	· -	OWED CHEDIN MODEL TO	. D
R51	Resistor. Composition: 47,000 ohms; 1/2 W		P	OWER SUPPLY, MODEL 60-A	1 17
R52	Resistor, Composition: 1 megohm; ½ W	R-1732			
R53	Resistor, Composition: 10,000 ohms; ½ V	7 R-1531	Symbol	DESCRIPTION	Part No.
R54	Resistor. Composition: 39,000 ohms; 1/2 V		•		
R55	Resistor, Composition: 1500 ohms: 1/2 W	R-1741	C1	Capacitor, Molded Tubular: .1 mfd; 400 V	C-1102
R56	Resistor, Composition: 47,000 ohms: 1/2 W		C2	Capacitor, Electrolytic: 100 mfd; 6 V	C-1022
R57	Resistor, Wirewound: 5 ohms; 10 W	R-2732	C3	Capacitor, Mica: 510 mmfd; 500 V	C-1791
R58, R61	Resistor, Wirewound: 50 ohms; 10 W and	D 22.55	C4	Capacitor, Electrolytic: 40 mfd; 450 V	C-1798
	3500 ohms; 15 W	R-2967	C5	Capacitor, Molded Tubular: .047 mfd; 400	
R59	Resistor, Wirewound: 500 ohms; 10 W	R-1341	C6	Capacitor, Molded Tubular: .047 mfd; 400	
R60	Resistor, Wirewound: 500 ohms; 10 W	R-1341	C7	Capacitor, Molded Tubular: .1 mfd; 400 V Capacitor, Molded Tubular: .1 mfd; 400 V	
R62	Resistor, Composition: 22,000 ohms; ½ W	R-1736	C8	Capacitor, Electrolytic: 40 mfd; 450 V	C-1798
R63	Resistor, Composition: 1 megohm; 1/2 W	R-1732	C9	Capacitor, Electrolytic: 40 mfd; 450 V	C-1798
R64	Resistor, Composition: 2200 ohms: ½ W	R-1737	CIO	Capacitor, Electrolytic: 40 mfd; 450 V	C-1798
1365 1365	Resistor, Composition: 100,000 ohms: ½		C11 C12	Capacitor, Electrolytic: 40 mfd; 450 V	C-1798
R66	Resistor, Composition: 120,000 ohms; ½ V		C13	Capacitor, Electrolytic: 40 mfd; 450 V	C-1798
R67	Resistor, Composition: 2.2 megohms; ½ 1		C14	Capacitor, Electrolytic: 150 mfd; 200 V	C-3137
R68	Resistor, Composition: 1000 ohms: ½ W	R-1577	0.11	Cupacivet, Electric, see, care and a	
R69	Resistor, Composition: 47,000 ohms: ½ W		R1	Resistor, Composition: 1 megohm: 1/2 W	R-1732
R70	Resistor, Composition: 22,000 ohms; ½ W		R2	Resistor, Composition: 2200 ohms; 1/2 W	R-1737
R71	Resistor, Wirewound: 7000 ohms; 5 W	R-2241	R3	Resistor, Composition: 27 ohms; 1/2 W	R-3124
R72	Resistor, Composition: 1 megohm; ½ W	R-1732	R4	Resistor, Composition: 100,000 ohms: 1/2	
R73	Resistor, Composition: 10,000 ohms; ½ W		R5	Resistor, Composition: 470,000 ohms; 1/2	
R74	Potentiometer, Composition: 250,000 ohm:		R6	Resistor, Composition: 2200 ohms; ½ W	R-1737
I1	Lamp, Dial	I-2148	R7	Resistor, Composition: 47,000 ohms; 1/2 W	R-1580
12	Lamp, Dial	I-2148	R8	Resistor, Composition: 39,000 ohms; 1/2 W	R-1938
13	Lamp, Dial	I-2148	R9	Potentiometer, Composition: 25,000 ohms	R-3108
14	Lamp, Dial	I-2148	R10	Resistor, Composition: 1 megohm; 1/2 W	R-1732
15	Lamp, Dial	I-2148	R11	Resistor, Composition: 1 megohm; ½ W	R-1732
16	Lamp, Dial	I-2148	R12	Resistor, Composition: 100,000 ohms: 1/2	V R-1583
J1	Jack: 2 Female Contacts	J-2070	R13	Resistor, Composition: 100,000 ohms; 1/2 V	V R-1583
J2	Jack, Phono: 1 Female Contact	J-1030	R14	Resistor, Composition: 2200 ohms; 1/2 W	R-1737
J3 -	Jack, Phono: 1 Female Contact	J-1030	R15	Resistor, Composition: 470,000 ohms; ½ 1	V R-1836
J4	Jack, Phono: 1 Female Contact	J-1030	R16	Resistor, Composition: 470,000 ohms; 1/2	V R-1836
J5	Jack, Phono: 1 Female Contact	J-1030	R17	Resistor, Wirewound: 3500 ohms; 5 W	R-3090
J6.	Jack, Phono: 1 Female Contact	J-1030	R18	Resistor, Wirewound: 3500 ohms; 5 W	R-3090
J7	Jack, Phono: 1 Female Contact	J-1030	R19	Potentiometer, Wirewound: 1500 ohms	R-2399
J8	Jack, Line: 2 Female Contacts	J-1152	R20	Resistor, Composition: 100 ohms; 1/2 W	R-2408
J 9	Jack, Line: 2 Female Contacts	J-1152	R21	Resistor, Composition: 10 ohms; 1/2 W	R-1807
J10	Jack, Line: 2 Female Contacts	J-1152	R22	Potentiometer, Wirewound: 50 ohms	R-2399
Li	Coil: FM Antenna	L-3041	R23	Resistor, Composition: 10 ohms; ½ W	R-1807
L2	Choke: RF	L-1600	R24	Resistor, Composition: 100 ohms; ½ W	R-2408
L3	Coil: FM RF	L-3042	R25	Résistor, Composition: 470 ohms; ½ W	R-1740
L4	Coil: FM Oscillator	L-3043	R26	Resistor, Wirewound: 50 ohms; 5 W	R-3093
L5	Choke: RF	L-1600	R27	Resistor, Wirewound: 100 ohms; 10 W	R-3119
L6	Coil: Peaking	L-3011	R28	Resistor, Wirewound: 20,000 ohms; 20 W	R-3092
L7	Coil: Loop Loading	L-2966		or 10,000 ohms; 20 W (see note on	T. 0140
L8	Coil: BC RF	L-2960	Tran	amplifier schematic)	R-3112 R-117- R-//75
L9	Coil: BC Oscillator	L-2961	R29	Resistor, Wirewound: 15,000 ohms; 10 W	20-000 Pu = // / U
L10	Loop: AM Antenna	LA-3004	J 1	Jack, Phono: 1 Female Contact	J-1030
· D.t.	Plug: 2 Male Contacts	P-2072	J2	Jack: 3 Female Contacts	J-1589
PI Pa	Plug: 1 Male Contact	P-1031	J3	Jack: 12 Female Contacts	J-1255
P2			J4	Jack, Line: 2 Female Contacts	J-1152
SI		f R-2815-			
S2	Switch: Band Selector	S-2958	L1	Choke, Audio	L-3086
T1	Transformer: Power	T-3095	L2	Choke, Swinging	L-3083
Z1	Transformer: FM IF	ZZ-2988	L3	Choke, Filter	L-3084
	Transformer: FM IF	ZZ-2987	•	•	
Z 2			P1	Plug: 12 Male Contacts	P-1256
Z3	Transformer: FM IF	ZZ-2987			
77.1	Transformer: FM Detector	ZZ-2986	T1	Transformer: Output	T-3088
Z 4	•				
Z5	Transformer: AM IF	ZZ-2985 ZZ-2984	T2.	Transformer: Power	T-3087 or